

# RETRO COTTON CANDY MACHINE™

Model # RCM-605

---



---

▪ **FOR HOUSEHOLD USE ONLY  
READ THESE INSTRUCTIONS BEFORE USING THIS  
UNIT!**

***SAVE THESE INSTRUCTIONS!***

▪ **CE PRODUIT EST EXCLUSIVEMENT DESTINÉ À  
UNE UTILISATION DOMESTIQUE.**

**LISEZ CES INSTRUCTIONS AVANT D'UTILISER VOTRE  
APPAREIL !**

***CONSERVEZ CES INSTRUCTIONS!***

▪ **SÓLO PARA USO DOMÉSTICO  
¡Lea las instrucciones antes de utilizar el producto!  
*CONSERVE ESTAS INSTRUCCIONES***

## IMPORTANT PRECAUTIONS

---

**Appliance Specifications:**

120 Volts  
60 Hz  
400 Watts

**Important Precautions to Remember:**

- A. NEVER use a scouring pad on the unit.
- B. NEVER leave unit unattended while in use.
- C. NEVER place anything other than the intended sugar in the extractor assembly head.
- D. Unplug unit from outlet when not in use and when cleaning.
- E. DO NOT operate this appliance with a damaged cord or plug or in the event the appliance ever malfunctions.
- F. DO NOT put in dishwasher.
- G. Keep out of reach of children.
- H. This appliance is NOT A TOY.
- I. This appliance is not intended for use by young children or infirm persons without supervision.
- J. Young children should be supervised to ensure that they do not play with the appliance.

## IMPORTANT SAFE GUARDS

---

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

- 1. Read all instructions before operating this appliance.
- 2. DO NOT TOUCH the hot surfaces. Use handles or knobs.
- 3. To protect against electrical shock do not immerse cord, plug or any part of this unit in water or other liquids.
- 4. Close supervision is necessary when any appliance is used by or near children.
- 5. Unplug from outlet when not in use and before removing parts for cleaning.
- 6. DO NOT operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair or send back to company as stated in this booklet in the warranty.
- 7. The appliance manufacturer does not recommend the use of accessory attachments. This may cause injuries.
- 8. DO NOT use outdoors.
- 9. DO NOT let the cord hang over the edge of table or counter tops or touch hot surfaces.
- 10. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
- 11. Extreme caution must be used when moving this appliance.
- 12. This unit must be on a level surface to operate properly.

## **IMPORTANT SAFE GUARDS (Continued)**

---

13. DO NOT use this appliance for other than intended use.
14. DO NOT leave unit unattended while in use or when plugged in to an outlet.
15. Check inside heating element compartment for foreign objects before switching to ON position.
16. Heating element in center can get hot. **Avoid contact until cool.**
17. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
18. Longer detachable power supply cords can be used if care is exercised in their use.
19. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
20. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
21. Keep hands away from the machine when it is in the ON position and is spinning.

### ***SAVE THESE INSTRUCTIONS!***

## **INTRODUCTION**

---

This retro looking cotton candy maker brings back memories of the classic diners from the 1950's. The RETRO COTTON CANDY MACHINE™ is a technologically advanced cotton candy maker.

The whole family will enjoy The RETRO COTTON CANDY MACHINE™. Please take care of your machine by following these instructions and precautions.

You can use a variety of flavored sugars with your RETRO COTTON CANDY MACHINE™

- Bubble Gum
- Boo Blue
- Spooky Fruiti
- Silly Nilly

And more....

**HERE'S A TIP** – You can use regular household granulated sugar in your RETRO COTTON CANDY MACHINE™. To add a little flavor and color, mix a pinch of your favorite pre-sweetened Kool-Aid® to the sugar. Imagine the variety of flavors you can make and the fun you'll have!

The RETRO COTTON CANDY MACHINE™ is easy to use, just follow these simple instructions.

## USING YOUR RETRO COTTON CANDY MAKER™

---

Your RETRO COTTON CANDY MACHINE™ is already fully assembled. You should clean it first before using.

Follow the cleaning instructions on page 4. Wash the extractor head in warm water, rinse and dry thoroughly. After washing and thoroughly drying the bowl, return the bowl to the base making sure it is LOCKED in to position.

Align the metal tabs on the base unit with the plastic tabs on the bowl. The tabs on the bowl will fit under the metal tabs.

As you turn the bowl counterclockwise to LOCK, make sure it is secured and locked into position. To remove, turn clockwise to UNLOCK. (See page 4, Figure C)

Return the extractor head assembly, making sure that the grooves are properly aligned to fit over the pegs on the stem. (See page 4, Figure B & C)

Now you are ready to enjoy tasty, fluffy cotton candy from your RETRO COTTON CANDY MACHINE™.

- A. First, find a stable surface near an electrical outlet before starting. (Make sure your cord is away from any water source. If needed, it is acceptable to use an extension cord.)
- B. Plug in unit at the OFF position.
- C. Turn unit to ON position and allow the unit to run for at least 5 minutes. This will allow it to warm up.
- D. Measure level tablespoon of sugar with measuring spoon supplied with your RETRO COTTON CANDY MACHINE™. Pour sugar into center receptacle (See page 4, Figure D). Switch to ON position.
- E. Your RETRO COTTON CANDY MACHINE™ will spin the sugar into a flossy sweet treat that you collect on the paper cone by spinning the cone as it circles the bowl...just like at the carnival!
- F. When you can visually see the cotton candy 'web' begin, collect the cotton candy on the cone by holding the cone vertically. Rotate the cone with your fingers while you circle the bowl. Once cotton candy has collected on the cone then hold the cone in a horizontal position over the extractor head still rotating the cone with your fingers. Continue turning the cone with your fingers while the cone is in the horizontal position and move from side to side making sure you are collecting all the cotton candy. (See page 4, Figure E).
- G. Turn the unit OFF when all the sugar has been dispensed. Once the extractor head has come to a complete stop, you can pour another measure of sugar in the extractor head and begin again. The cotton candy should be flowing more quickly as the unit should be sufficiently warmed up.

### **IMPORTANT NOTES AND ILLUSTRATIONS**

**For optimum results** - Be sure to turn unit ON and allow it to run for at least 5 minutes before starting. This allows the unit to properly warm up before beginning to actually spin the cotton candy. Only add sugar to the extractor head when it has come to complete stop. Never use ingredients other than pure granulated sugar. This will cause clogging. DO NOT overfill the sugar receptacle.

By following these simple instructions, using your RETRO COTTON CANDY MACHINE™ will be fun for kids of all ages...young or old by bringing a carnival atmosphere to any occasion.

**IMPORTANT NOTES AND ILLUSTRATIONS (Continued)**

**Figure A**  
Removing the Extractor Head Assembly



**Figure B**  
Extractor Head showing groove that fits over stem



**Figure C**  
Metal tab on unit fitted with plastic tab on bowl to Lock and Unlock extractor head



**Figure D**  
Pouring sugar into receptacle



**Figure E**  
Turning the cone with your fingers, while holding the cone in the horizontal position.



**Figure F**  
Breaks down to bowl, machine Body and Extractor head.

## CLEANING

---

1. Make sure unit is unplugged and has had time to cool down before cleaning.
2. After cooling, remove the extractor head assembly by pulling straight up.  
**NOTE: You may want to use pliers to get a good grip on the small center piece.** UNLOCK bowl by turning clockwise and remove (See page 4, Figure A & B & C). Wash both in warm water, rinse and dry.
3. Use a slightly damp, non-abrasive sponge or non-abrasive towel to wipe clean the outside of the unit, wipe with a non-abrasive soft towel to dry.
4. The RETRO COTTON CANDY MACHINE™ breaks down to – body, bowl, and extractor head assembly for easy cleaning. (See Figure F above)

## RETURNS & WARRANTY

---

SHOULD YOUR UNIT NOT WORK OR IS DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC  
1471 Partnership Dr.  
Green Bay, WI 54304-5685

### **Customer Service**

Phone: (920) 347-9122  
Web: [www.nostalgiaelectrics.com](http://www.nostalgiaelectrics.com)

### **Customer Service Inquiry**

To submit a Customer Service inquiry, go to [www.nostalgiaelectrics.com](http://www.nostalgiaelectrics.com) and fill out the **Customer Service Inquiry** form and click the Submit button. A representative will contact you as soon as possible.

## RETRO COTTON CANDY MACHINE™

Model # RCM-605

Limited Warranty

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. To obtain service under this warranty, return this unit to Nostalgia Products Group, LLC at the address above, shipping prepaid. You must also include a copy of the original receipt along with your name, address and phone number. Include a description of the defect along with the date you purchased the product.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.



Nostalgia Products Group LLC  
1471 Partnership Dr.  
Green Bay, WI 54304-5685

Visit Us Online at  
[www.nostalgielectrics.com](http://www.nostalgielectrics.com)

©2009 Nostalgia Products Group LLC